


Panasonic[®]

Operating Instructions Vacuum Cleaner (Domestic)

Model No. **MC-UG614**

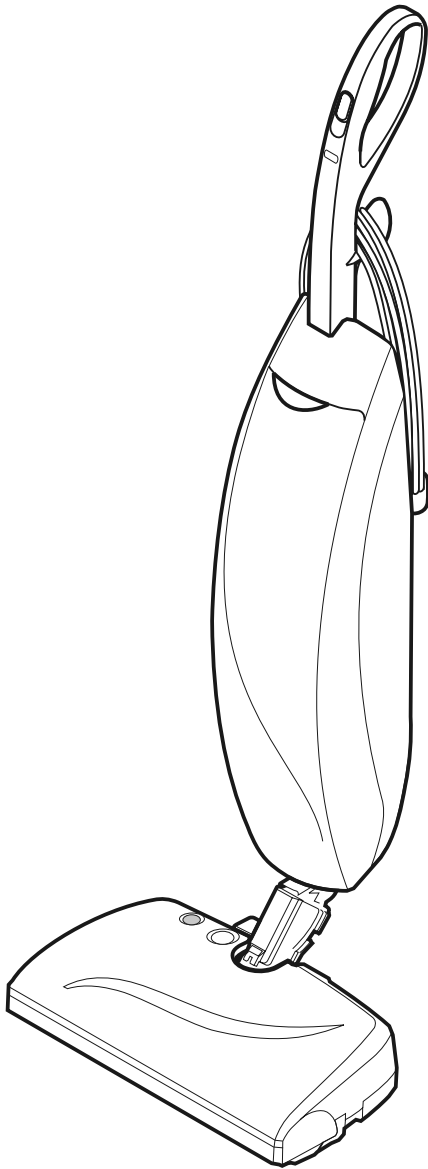

We would advise that you carefully study these Operating Instructions before attempting to operate the vacuum cleaner and that you note the Important Safety Instructions. Please keep in a safe place with your Authorised Dealer Service booklet. This product complies with the directive 2006/95/EC and 2004/108/EC.

TABLE OF CONTENTS

	Page		Page
• Caution for AC Mains Lead (UK and Ireland only)	2	TOOLS	11
• Important Safety Instructions for the User	3	MAINTENANCE AND SERVICING	
• Cautions	3	A) Vacuum cleaner storage.....	12
• Identification of main parts	4	B) Cleaning exterior	12
ASSEMBLY INSTRUCTIONS		C) Dust bag replacement	13
A) How to attach the handle	5	D) Exhaust filter replacement	14
B) Mains lead	5	E) Secondary filter cleaning	14
PERFORMANCE FEATURES		F) Clog removal	15
A) Motor protection system	6	G) Nozzle care.....	16
B) Belt reset button.....	6	H) Belt changing and agitator cleaning	16
HOW TO OPERATE YOUR VACUUM CLEANER		I) Agitator cleaning.....	17
A) Mains lead	7	J) When to replace the agitator	17
B) Handle release.....	7	K) Replace belt.....	18
C) ON/OFF switch	7	L) Troubleshooting	19
D) Suggested pile height settings.....	8	• Specifications.....	20
E) Vacuuming tips	8	• Consumables / Accessories.....	21
F) Vacuum cleaner stabilizer.....	9	• Disposal information	22
G) How to use the accessories	10		
H) How to install the hose	10		



CAUTION FOR AC MAINS LEAD (UK and Ireland only)

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 13 amp fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has rating of 13 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

 
Blue : Neutral

Brown : Live

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.


Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .

How to replace the Fuse:


• There are two types of the supplied AC Mains Lead : A and B as shown below.

1 Open the fuse compartment with a screwdriver.



2 Replace the fuse and fuse cover if detachable.

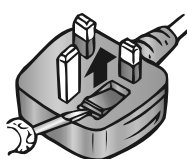

TYPE A

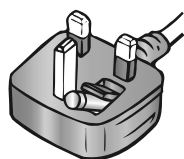

TYPE B

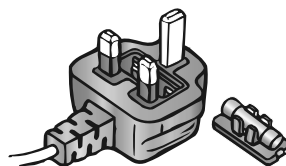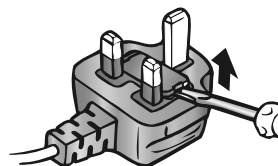

IMPORTANT SAFETY INSTRUCTIONS FOR THE USER




Before using the vacuum cleaner, please read these basic precautions.
WARNING: To reduce the risk of fire, electric shock, or injury.

- Do not leave the vacuum cleaner plugged into mains socket. Unplug from the socket when not in use and before cleaning the appliance or undertaking maintenance operations.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of the product, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. If not, may cause an electrical shock, fire or injury.
- Children should be supervised to ensure that they do not play with the appliance. If not, may cause an electrical shock, fire or injury.
- Do not use if the mains lead or mains plug is damaged. If the vacuum cleaner is not working as it should be, or has been dropped, damaged, left outdoors, or come into contact with water, consult an authorised Panasonic Service Centre.
- Do not pull or carry by the mains lead, use the mains lead as a handle, close a door on the mains lead, pull the mains lead around sharp edges or corners. Do not run over the mains lead with the vacuum cleaner. Keep the mains lead away from heated surfaces.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may block or reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use the vacuum cleaner without filters and /or dust bin in place.
- Do not use wet filters after wash, see E) Secondary Filter Cleaning.
- Turn off all controls before unplugging.
- Do not use to pick up flammable or combustible materials, or others that may become so or use in areas where they may be present.
- This appliance should be serviced by an authorised Panasonic Service Centre, and only genuine Panasonic spare parts should be used.
- Use extra care when cleaning on stairs. Keep hold of the handle to prevent the vacuum cleaner from falling.
- To prevent damaging carpeted floors, tiled floors, Linoleum, etc. Do not leave the agitator rotating in the same place for too long.
- Keep bare feet and hands away from the agitator. (It may cause injury)


NOTE: This vacuum cleaner is designed for general household use only and is not suitable for use in a garage, garden or to suck up liquids.




CAUTIONS

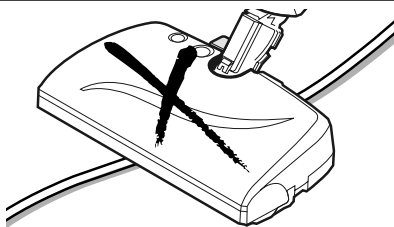


1. To avoid any possible damage to the mains lead, never run over the mains lead or allow it to become caught in the agitator when using the vacuum cleaner.

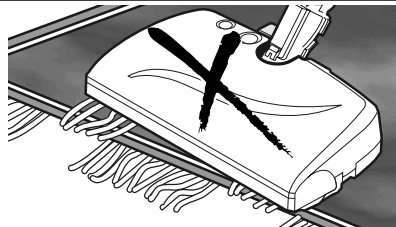


2. Do not run the vacuum cleaner over tassels or fringes of rugs or mats as they could get caught up in the agitator and may cause damage to belt.

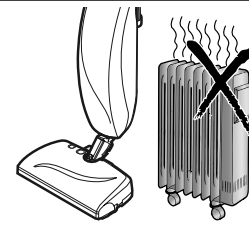


3. Keep the vacuum cleaner away from heat sources such as radiators, fires, direct sunlight, etc.

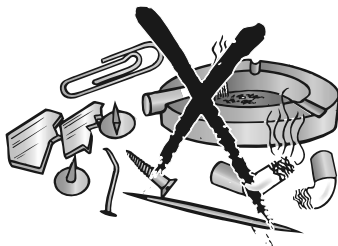

4. To avoid damaging the vacuum cleaner, never let the vacuum cleaner pick up wet matter, mud, burning ashes or large and sharp objects.

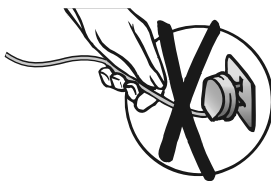


5. Do not pull on the mains lead when disconnecting the appliance from the mains socket, always pull on the plug body itself.

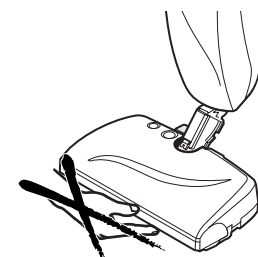


6. To avoid injury, keep your fingers and hands away from the agitator, and never put them between the body parts.

IDENTIFICATION OF MAIN PARTS

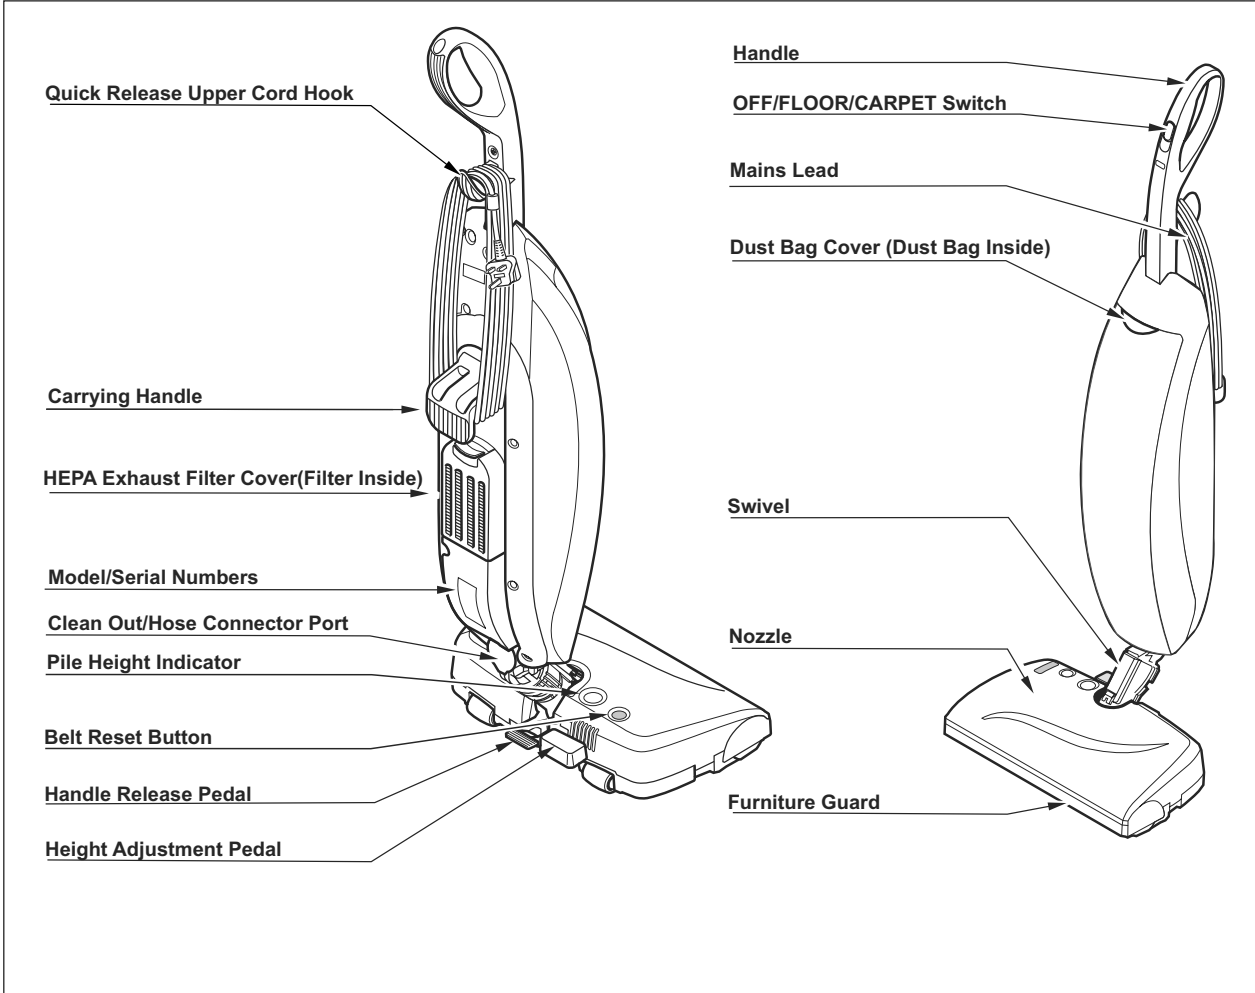


ASSEMBLY INSTRUCTIONS

A) HOW TO ATTACH THE HANDLE

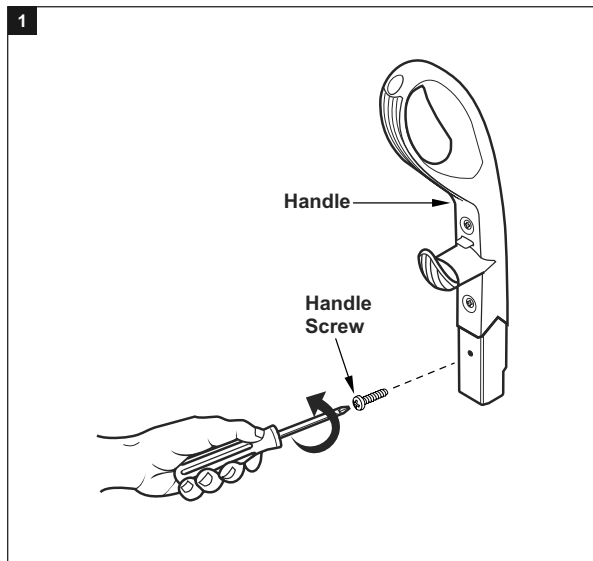

Remove the handle screw from the rear of the handle unit.

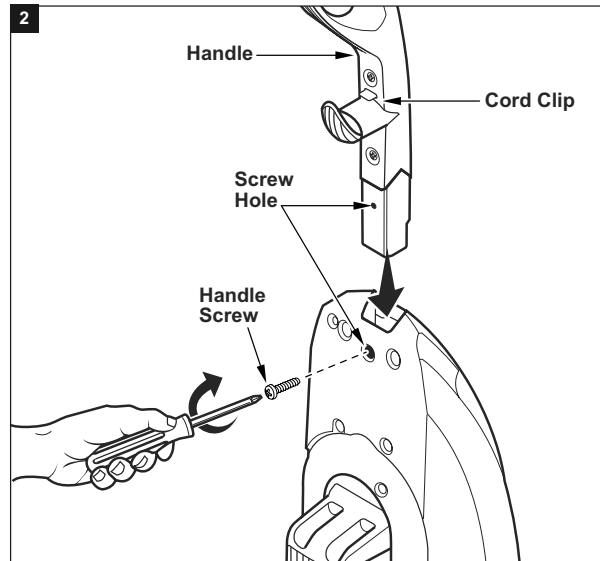


Insert the handle assembly in the handle opening as shown in the illustration.

Using screwdriver, tighten handle screw.

NOTE: It may be necessary to adjust the handle slightly to align the screw hole.

B) MAINS LEAD

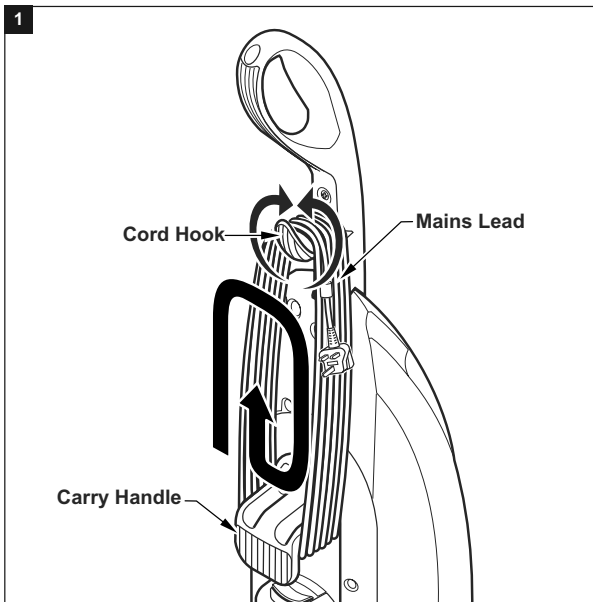


Make sure that cord hook is rotated in the upright position as shown.

Insert mains lead beneath cord clip on rear of handle unit.


Wrap mains lead loosely around cord hook and carry handle.

Lock the plug onto the mains lead.

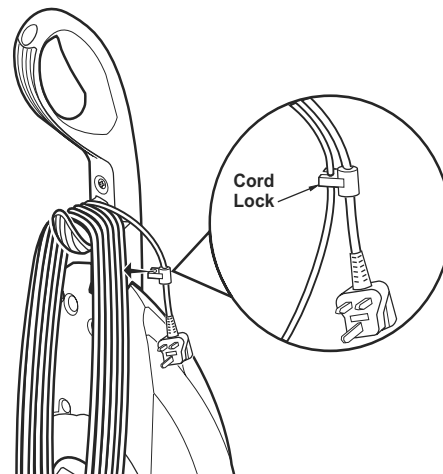

PERFORMANCE FEATURES

A) MOTOR PROTECTION SYSTEM

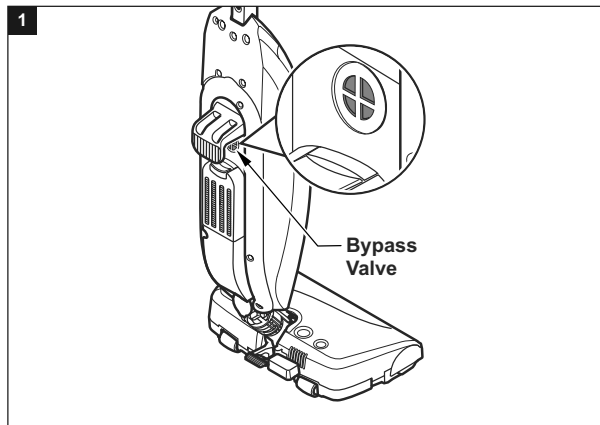

BYPASS VALVE

This vacuum cleaner has a motor protector bypass valve which prevents motor overheating and damage.

The valve opens to provide cooling air when a clog or full bag prevents normal air flow to the vacuum cleaner suction motor.

You will notice a change of sound as air rushes through the valve opening.

To correct problem install a new dust bag/or locate and remove the clog (see clog removal, page 15).

NOTE: The bypass valve may open when cleaning new carpet due to reduced airflow caused by the new carpet lint filling the dust bag quickly.

Note: Do not block bypass valve.

THERMAL PROTECTOR - SUCTION MOTOR

This vacuum cleaner has a thermal protector which automatically trips to protect the vacuum cleaner suction motor. If a clog prevents the normal flow of air to the motor, the thermal protector turns the motor off automatically.


This allows the motor to cool in order to prevent possible damage to the vacuum cleaner. The motor may re-start unexpectedly when it cools.

To reset thermal protector:

Turn the vacuum cleaner off and unplug the mains lead from the socket to allow the vacuum cleaner to cool and the thermal protector in the suction motor to reset.

Check for and remove clogs, and replace bag if necessary (See **CLOG REMOVAL**, page 15). Also check and replace any clogged filters. Wait approximately 40-50 minutes before restarting vacuum cleaner.

B) BELT RESET BUTTON

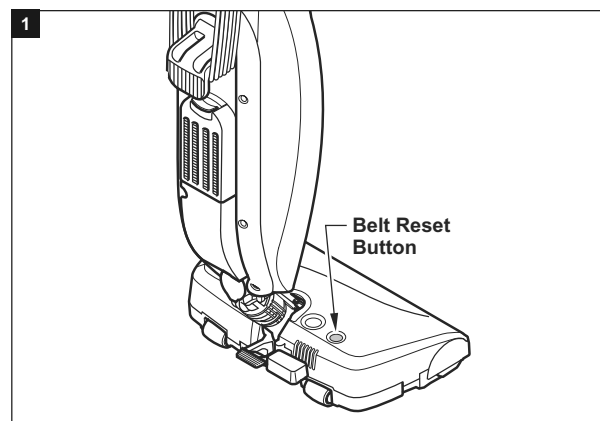

BELT OVERLOAD PROTECTOR

The agitator drive system has built-in protection against motor damage should the agitator jam.

If the agitator slows down or stops, the belt overload protector shuts off the agitator motor.

The vacuum cleaner suction motor will continue to run.


To correct problem:

Turn off and unplug vacuum cleaner, remove obstruction, then press **BELT RESET BUTTON**. Allow 20 seconds to pass before attempting reset.

NOTE: If the problem persists, have the vacuum cleaner serviced by a qualified Panasonic technician.


HOW TO OPERATE YOUR VACUUM CLEANER

A) MAINS LEAD

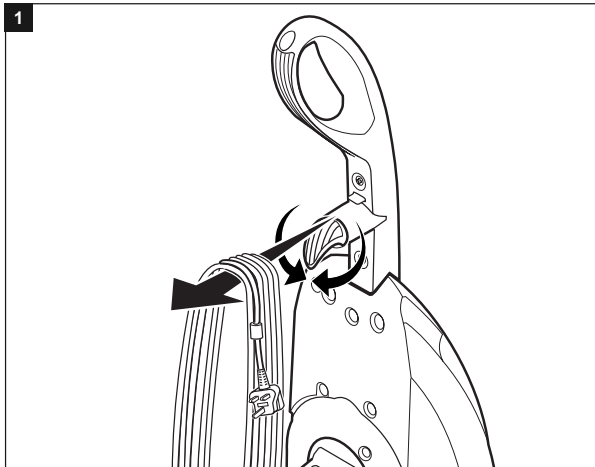

Turn the quick release upper cord hook to either side and down to release the mains lead.

Detach the plug from the mains lead and pull the cord off the quick release upper cord hook.

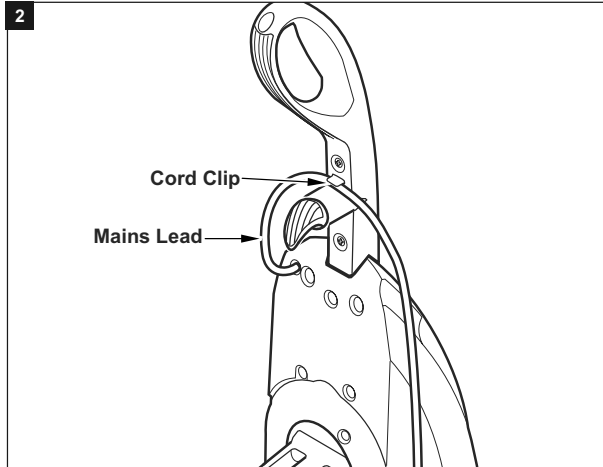


Be sure the mains lead is locked under the cord clip on the rear of the handle.

Plug the mains lead into a 240 Volt mains socket located near the floor.

Note: To store mains lead, turn upper cord hook to the up position, then wrap cord loosely around quick release cord hook and carrying handle. Refer to VACUUM CLEANER STORAGE (page 12).

B) HANDLE RELEASE

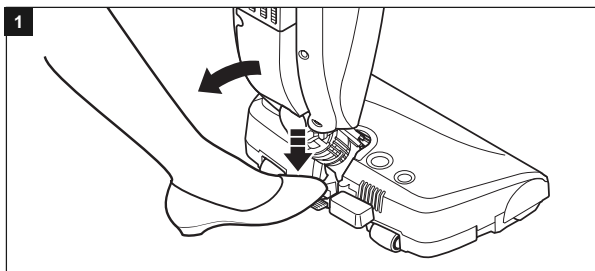


Release the handle by pressing down on the foot pedal with your foot and pulling back and down on the handle with your hand.

CAUTION

To prevent damaging carpeted floors, tiled floors, linoleum, etc. Do not leave the agitator rotating in the same place for too long.

NOTE: After use, unplug the mains lead from the socket and store the vacuum cleaner in the upright (vertical) position.

C) ON/OFF SWITCH

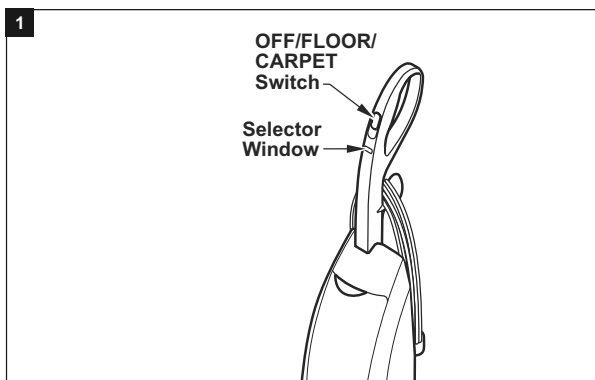


OFF - Turns both suction and agitator motors off.

FLOOR - Turns on the suction motor only. In this position the agitator assembly does not revolve. Use this setting for cleaning hardwood and tile floors and when any attachments (tools) are used.

CARPET - Turns on both the suction and the agitator motors.

D) SUGGESTED PILE HEIGHT SETTINGS

There are four (4) pile height settings on the vacuum cleaner. For best deep down cleaning, use the XLO setting. However, you may need to raise the height to make some jobs easier, such as scatter rugs and some deep pile carpets, and to prevent the vacuum cleaner from shutting off.

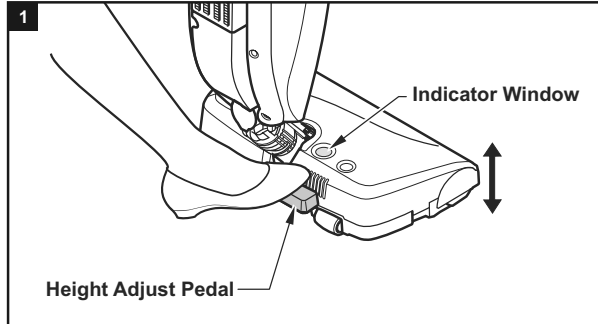

Suggested settings are:

HI – Shag, deep pile, or scatter rugs.

MED – Medium to deep pile.

LO – Low to medium pile.

XLO – Most low pile carpets, bare floors, and delicate carpets that require agitator to be turned off.


To select a pile height setting:

Select a pile height setting by pressing the **HEIGHT ADJUST** pedal on the rear of the nozzle. The pile height setting shows in the indicator window.

Attention: Refer to your carpet manufacturer's cleaning recommendations. Some more delicate carpets may require that they be vacuumed with the agitator turned off to prevent carpet damage.

NOTE: Height adjustments should be made with the unit in the use position.

E) VACUUMING TIPS

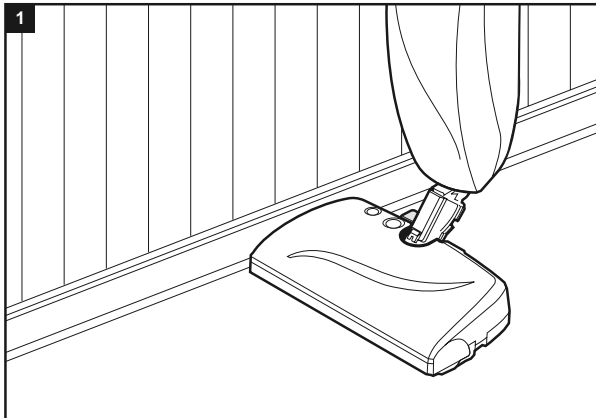

CARPET EDGES

Guide either side of the nozzle along the wall.

NOTE: For best cleaning results, keep the air-flow passage clear. **Unplug the vacuum cleaner from the mains socket before checking.**

See **CLOG REMOVAL** (page 15).



WARNING

Personal Injury Hazard

Use care if vacuum cleaner is placed on stairs. If it falls, personal injury or property damage could result.

F) VACUUM CLEANER STABILIZER



CAUTION: When the vacuum cleaner handle is left in the upright (vertical) position on tilted or unlevel surfaces, insert stabilizer into the slot just beneath the height adjustment pedal (as shown).

The stabilizer provided will add stability to the unit when sitting on unlevel surfaces or when using the attachment hose and accessories.

DIRECTIONS FOR USE:



1. Remove stabilizer from filter cover holder.
2. Insert stabilizer into slot provided on the vacuum cleaner beneath the height adjustment pedal.

Note: Before moving the vacuum cleaner on the floor surface, always remove the stabilizer from the slot and return it to the filter cover holder.




CAUTION

Do Not Move the vacuum cleaner across the floor with the stabilizer in place. Failure to remove the stabilizer during floor cleaning may result in damage to the carpet or floor surface.

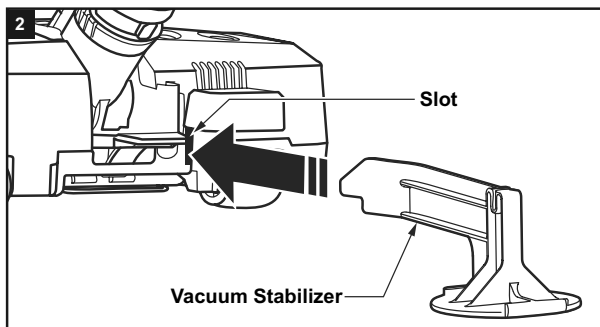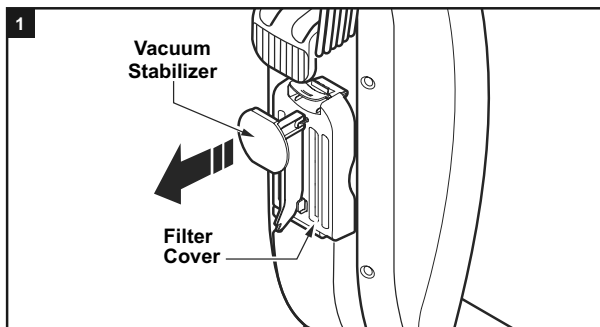


3

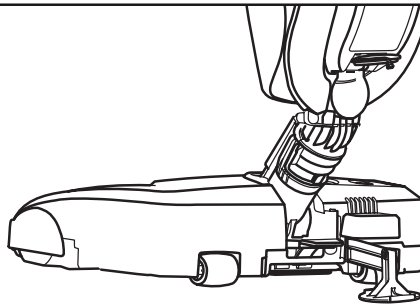


REPLACE VACUUM CLEANER STABILIZER:

1. Return stabilizer to vacuum by inserting it into the holder on the filter cover when finished.


1

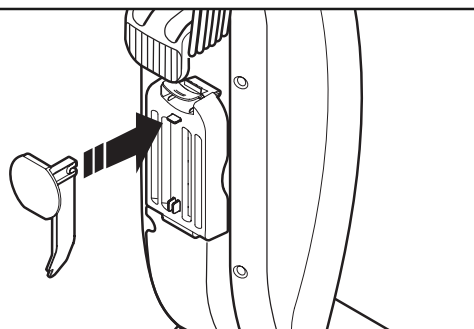

2


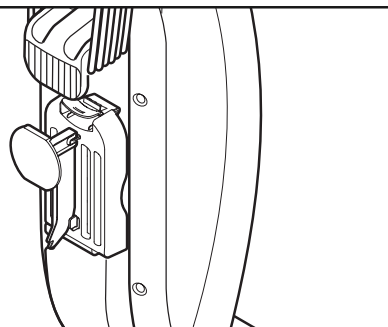


G) HOW TO USE THE ACCESSORIES

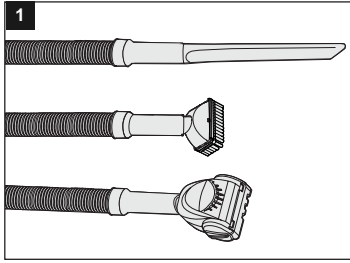

Connect any of the accessories, as indicated.

Lift out accessories needed.

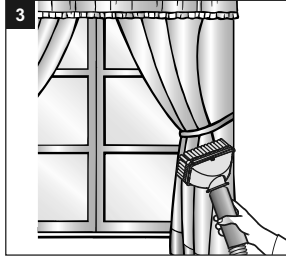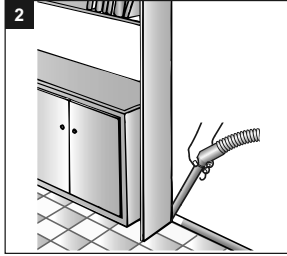

CAUTION:
While using the accessories, hold the vacuum cleaner handle with one hand to avoid pulling the vacuum cleaner over.




To prevent damage to carpeted floors when using tools, lock handle in the upright position. The agitator will automatically shut off.




To avoid accidental injury, keep children away from the agitator while in operation.

NOTE: After using the accessories, disconnect the hose from the connector pipe.


H) HOW TO INSTALL THE HOSE

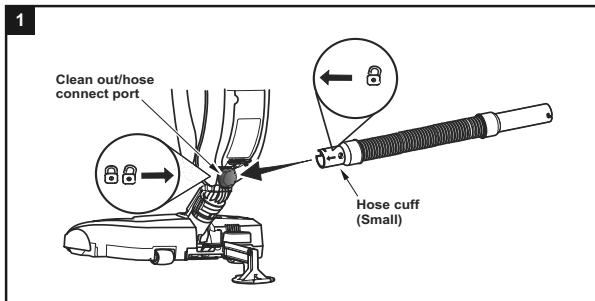


To connect the hose, open clean out / hose connect port door.

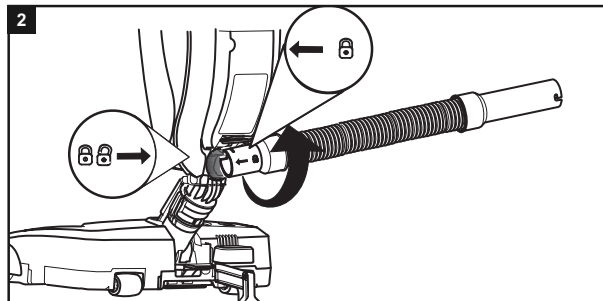

Insert the smaller hose cuff such that corresponding arrows on the cuff and port align (Arrow on port to "UNLOCK" icon on cuff). Turn cuff clockwise until port arrow aligns with "LOCK" icon on cuff.



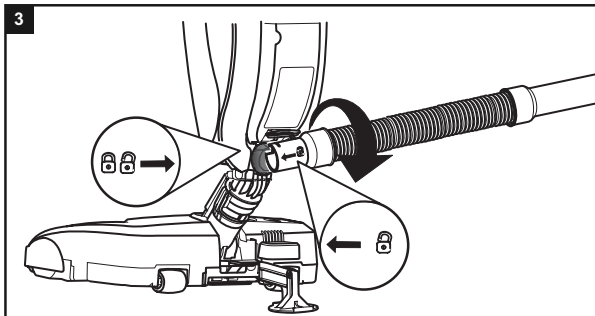


To remove the hose, turn cuff counter-clockwise. When port arrow and cuff "UN-LOCK" icon realign, pull cuff straight out.

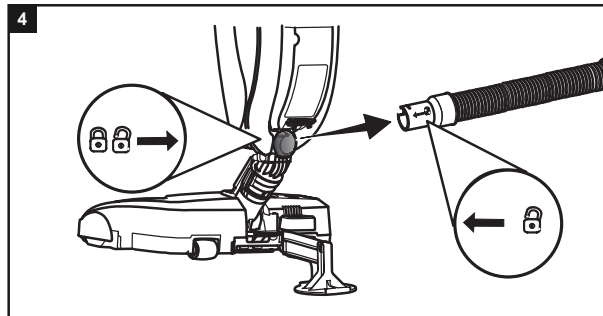


After hose is removed, close clean out/hose connect port door until it snaps.

TOOLS

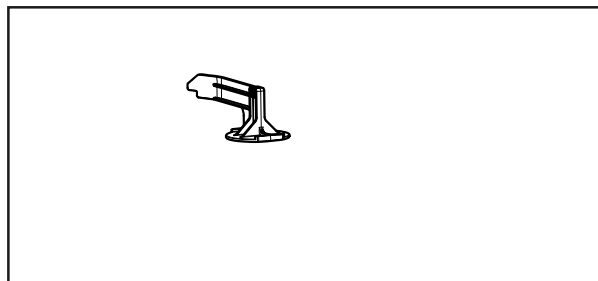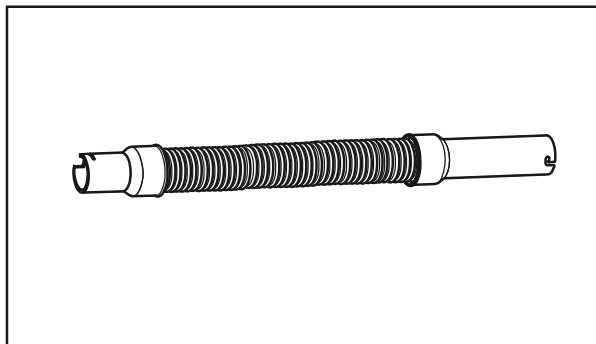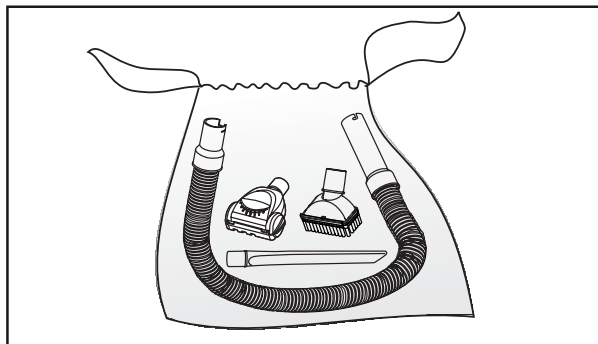


The vacuum stabilizer must be inserted into the vacuum cleaner beneath the height adjustment pedal prior to using any tool.

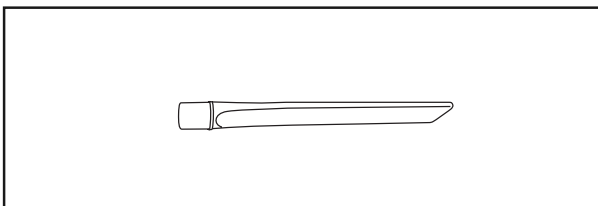


The crevice tool may be used on the following items:

- Furniture
- Cushions
- Drapes
- Stairs
- Walls

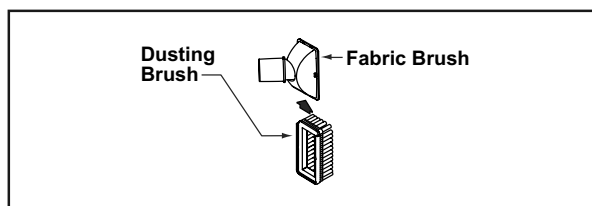

The combination brush may be used on the following items:

- Furniture
- Drapes
- Stairs
- Walls

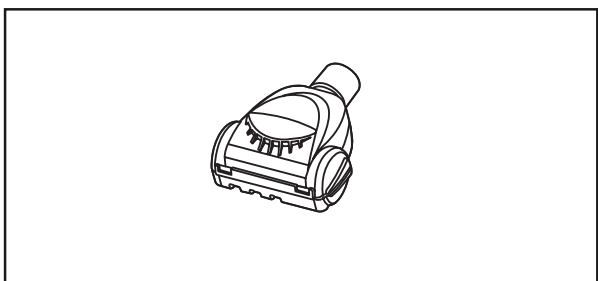

The Air Turbine may be used on the following items:

- Furniture
- Stairs

Note: Always clean tools before using.


MAINTENANCE AND SERVICING

Always follow all safety precautions when cleaning and servicing the vacuum cleaner.

WARNING

Electrical Shock And Personal Injury Hazard

Disconnect from electrical supply before servicing or cleaning the vacuum cleaner. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

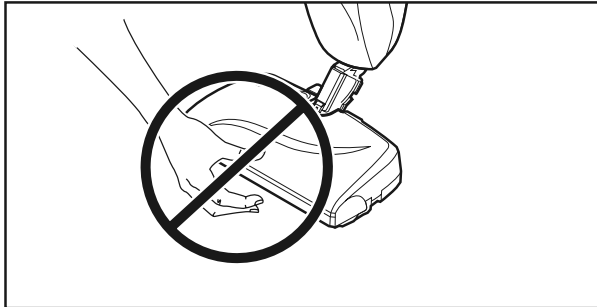


CAUTION

Moving parts! To reduce the risk of personal injury, **DO NOT** touch the agitator when vacuum cleaner is on. Contacting the agitator while it is rotating can cut, bruise, or cause other injuries. Always unplug from electrical socket before servicing.

Use caution when operating near children.

A) VACUUM CLEANER STORAGE

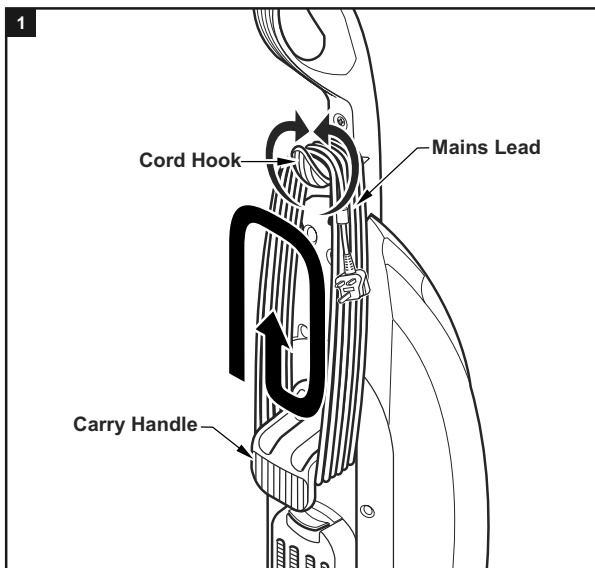

Place the handle in the upright position.

Unplug the mains lead from the mains socket.

Gather the mains lead and wrap it loosely around the upper cord hook and carry handle.

Lock the plug onto the mains lead.

Store the vacuum cleaner in a dry, indoor area, on the floor with the handle locked in the upright position.

WARNING

Electrical Shock And Personal Injury Hazard

Wrapping the mains lead too tightly puts stress on the mains lead and can cause damage to the mains lead. A damaged mains lead is an electrical shock hazard and could cause personal injury or damage.

B) CLEANING EXTERIOR

Unplug mains lead from mains socket.

Clean exterior using a clean, soft cloth that has been dipped in a solution of mild liquid detergent and water, then wrung dry. **DO NOT** drip water on vacuum cleaner. Wipe dry after cleaning.

To reduce static electricity and dust build-up, wipe outer surface of vacuum cleaner.

WARNING

Electrical Shock And Personal Injury Hazard

Disconnect electrical supply before servicing or cleaning the vacuum cleaner. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

C) DUST BAG REPLACEMENT




CAUTION


Electrical Shock And Personal Injury Hazard

Always disconnect the vacuum cleaner from mains socket before carrying out any service or maintenance on the vacuum cleaner.


NOTE: Always operate vacuum cleaner with genuine Panasonic Type U-13 dust bag. Use replacement dust bag AMC-D1EP (TYPE U-13).

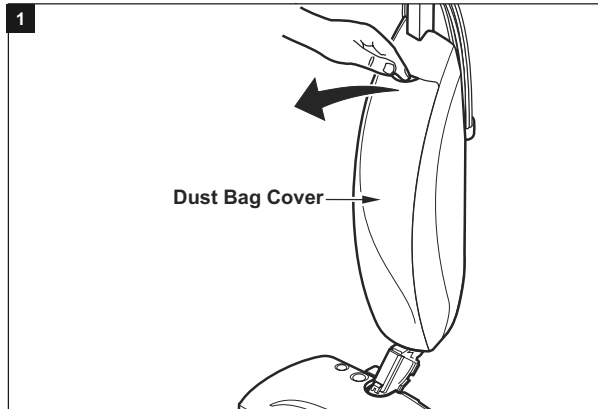


Insert fingers in the latch recess at the top of the dust bag cover and pull to open. Remove dust bag cover from front of vacuum cleaner.

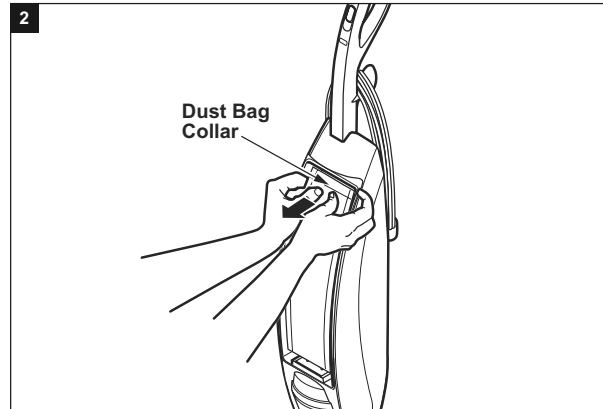

Grasp the dust bag collar and pull gently, carefully removing the dust bag from the dust bag holder.

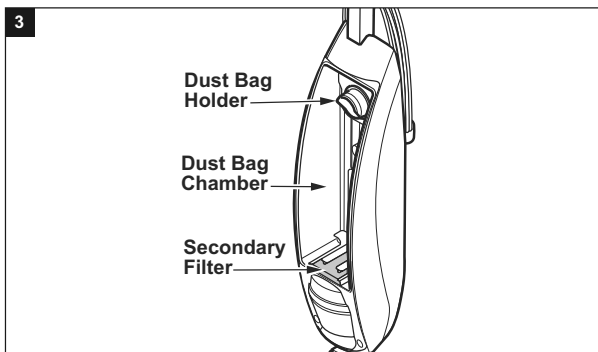


Check the dust bag holder and the secondary filter for dirt or clogs.

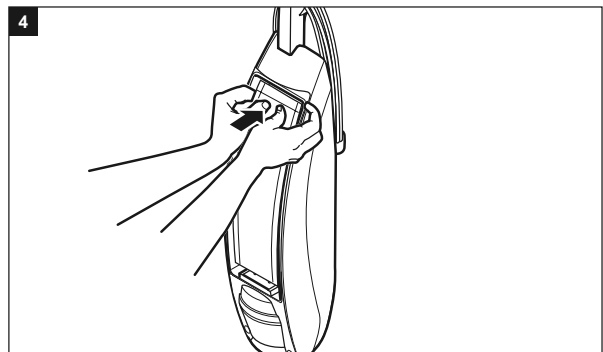

Hold the new dust bag as shown and push dust bag collar opening completely over the dust bag holder as far as it will go.




Tuck the bag into the dust bag chamber. Be sure the bottom and sides of the dust bag are completely within bag chamber prior to closing the bag cover.

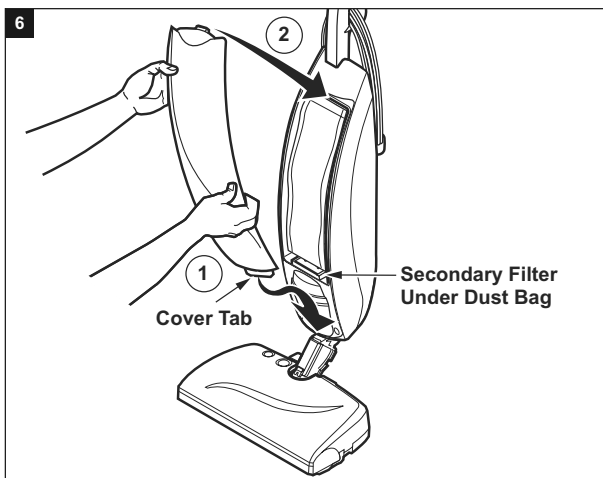

Insert cover tab in bottom and rotate the bag cover closed. You will hear a distinct snap when cover is securely latched.


D) EXHAUST FILTER REPLACEMENT

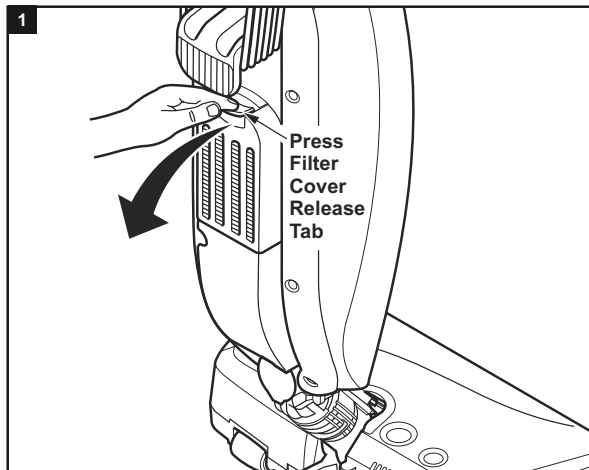

The HEPA exhaust filter must be replaced when dirty. It should be replaced regularly depending on use conditions. **The filter CANNOT** be washed as it will lose its dust trapping ability.

NOTE: See VACUUM CLEANER CONSUMABLES/ACCESSORIES (page 21) for the exhaust filter number.

Remove exhaust filter cover by pressing the release tab on the cover and rotating out from vacuum cleaner.

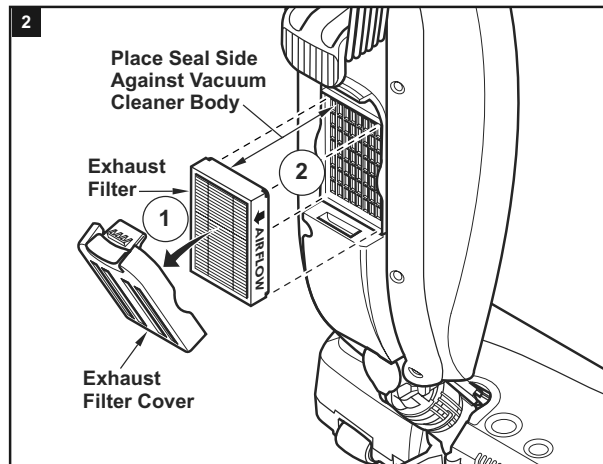


Remove the filter cartridge from cover.

Place new filter cartridge into cover making sure that airflow arrow on side of cartridge points into cover.

Place foam seal of filter against the vacuum cleaner body.

Replace the exhaust filter cover by placing bottom tabs in slots and rotating in until cover snaps into place.

E) SECONDARY FILTER CLEANING

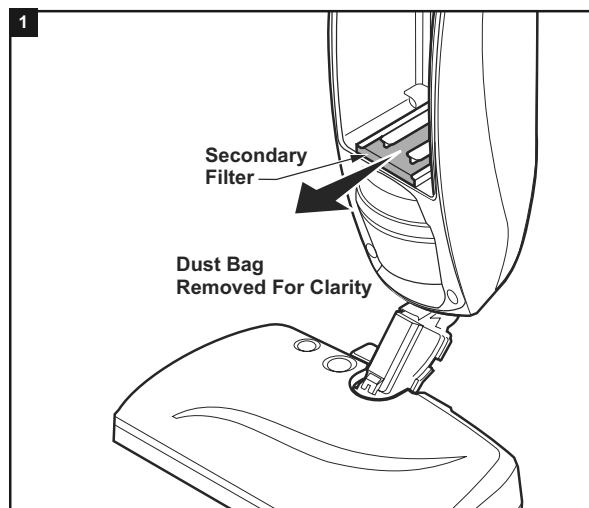

SECONDARY FILTER

Check secondary filter frequently and clean when dirty.

If the secondary filter, located in the bottom of the dust bag chamber, is dirty, remove it by pulling forward out from under the ribs.

Wash the foam filter in warm soapy water, rinse and dry thoroughly by squeezing the filter in your hand and letting it air dry.

DO NOT wash in the dishwasher.

DO NOT install damp.

DO NOT use vacuum cleaner without secondary filter and dust bag.

Replace the secondary filter by sliding it back into place under the ribs in the dust bag chamber.



WARNING

Electrical Shock Hazard

Unplug mains lead from electrical socket. Do not operate the vacuum cleaner without the secondary filter. Be sure the filter is dry and properly installed to prevent motor failure and/or electrical shock.


F) CLOG REMOVAL




WARNING

Electrical Shock And Personal Injury Hazard


Disconnect electrical supply before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

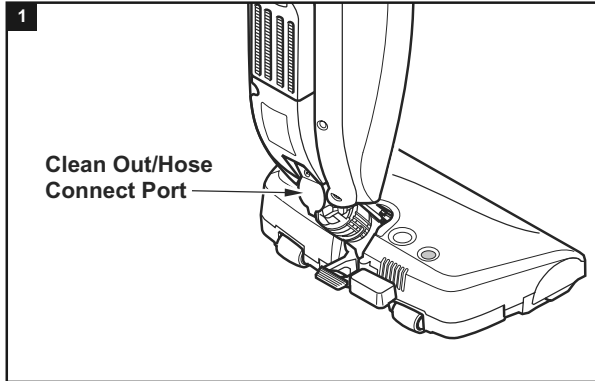


Locate clean out/hose connect port.

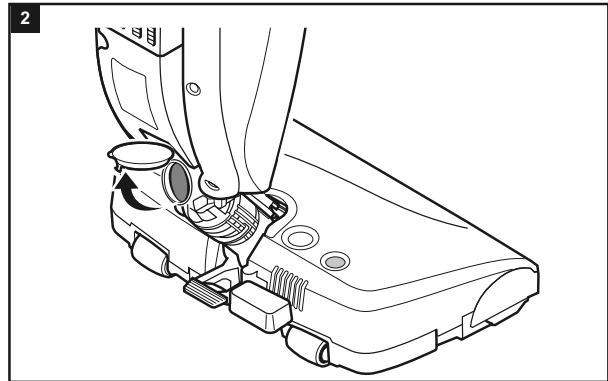

Open clean out/hose connect port door.

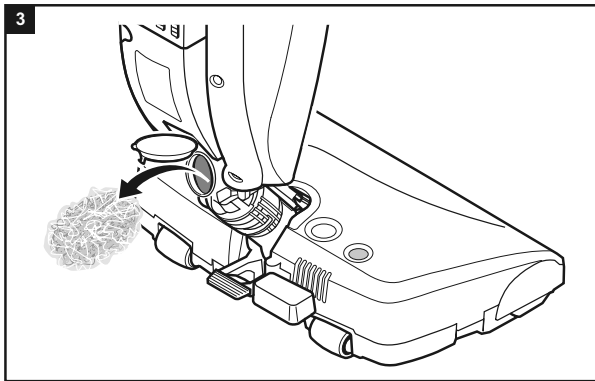


Remove any clog seen from dirt path.

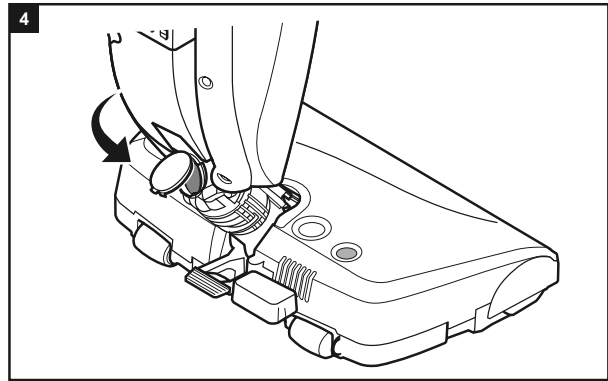

After dirt path is cleared close door until it snaps.

G) NOZZLE CARE

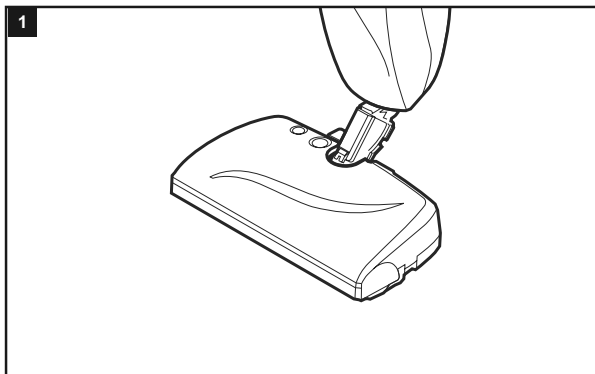

Always follow all safety precautions when performing maintenance to the nozzle.




WARNING

Electrical Shock Or Personal Injury Hazard

Always turn off and unplug vacuum cleaner before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.


H) BELT CHANGING AND AGITATOR CLEANING

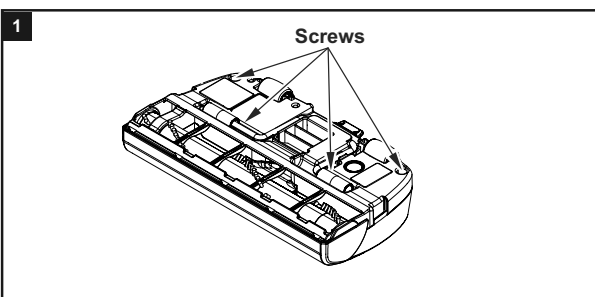


Turn nozzle upside down and unscrew four (4) nozzle cover screws. Turn nozzle top side up.




Press release pedal and lower the handle.

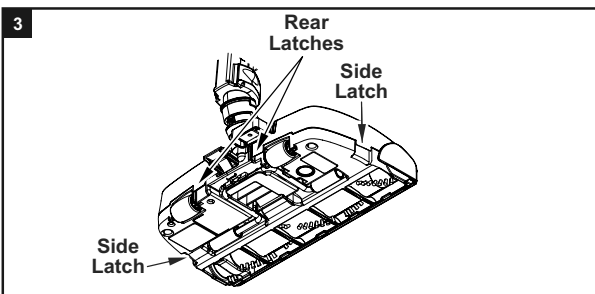

Lift rear latches up.

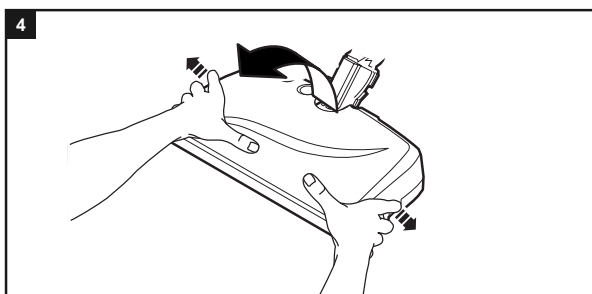


Grasp the side latches and pull out. Lift cover upward from back to remove.

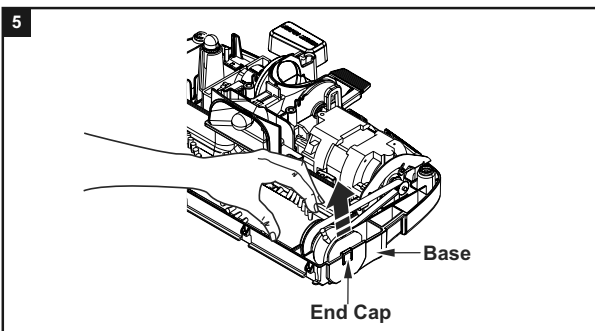



Lift agitator assembly out and remove worn belt.

Check and clean end cap areas. See **AGITATOR ASSEMBLY** (page 17) for picture of complete agitator assembly.

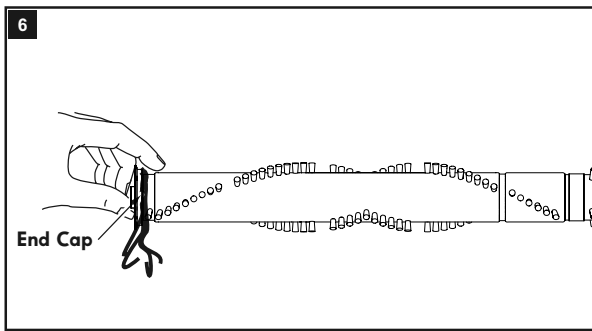

Cut off any carpet pile, hair or lint entangled around the agitator and remove any string or debris located near the end caps.

I) AGITATOR CLEANING

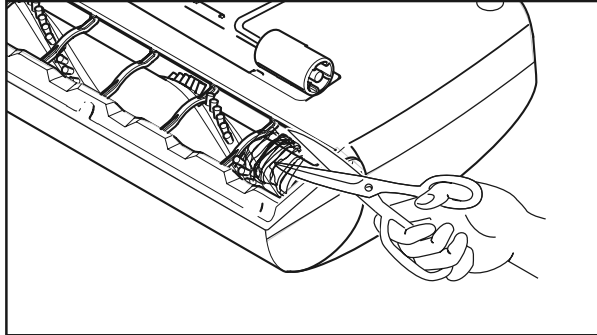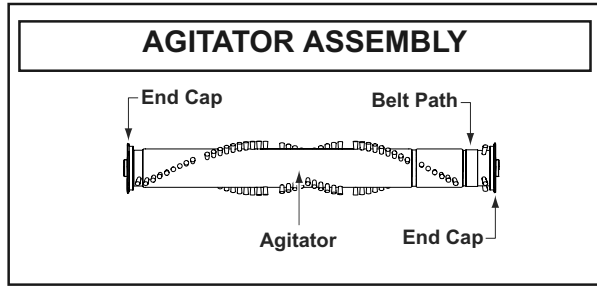

TO CLEAN AGITATOR:

NOTE: In order to keep cleaning efficiency high and to prevent damage to your vacuum cleaner, the agitator must be cleaned every time the belt is changed.

The agitator must also be cleaned according to the following schedule:

<u>Vacuum Cleaner Use</u>	<u>Clean Agitator</u>
HEAVY - (used daily)	every week
MODERATE - (used 2-3 times/week)	every month
LIGHT - (used 1 time/week)	every 2 months

IMPORTANT

Turn off and unplug vacuum cleaner from mains socket. Check and remove hair, string and lint build-up frequently in the nozzle agitator and end cap areas.

Remove any dirt or debris in the belt path area or in the brush roller area.

Carefully remove any string or debris located on the agitator or end caps.


J) WHEN TO REPLACE THE AGITATOR



WARNING

Electrical Shock Or Personal Injury Hazard

Always turn off and unplug vacuum cleaner before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

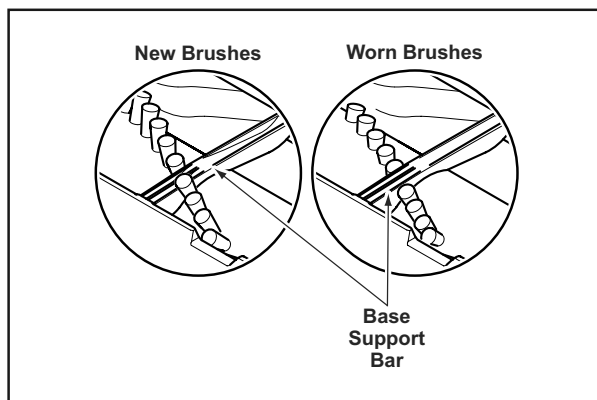

TO CHECK THE BRUSHES

When brushes are worn to the level of the base support bars, replace the agitator assembly.


TO REPLACE AGITATOR ASSEMBLY

Remove nozzle cover, belt and agitator assembly. See **BELT CHANGING AND AGITATOR CLEANING** (page 16).


Replace agitator assembly.

Reinstall belt and nozzle cover. See **REPLACE BELT** (page 18).


K) REPLACE BELT

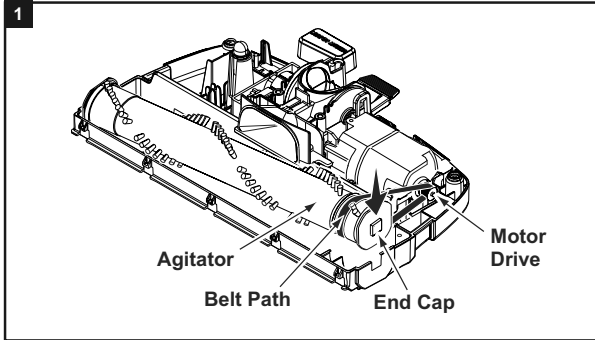

Install new belt over motor drive, then over belt path.

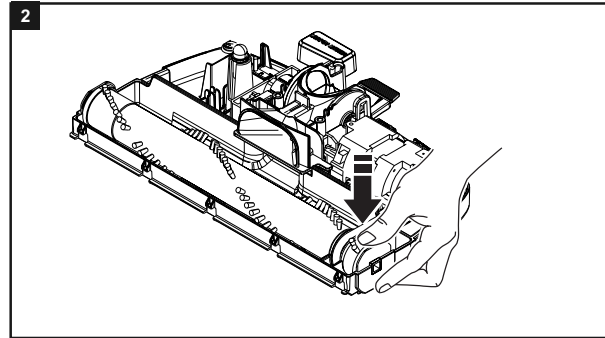

Place agitator assembly into nozzle base.

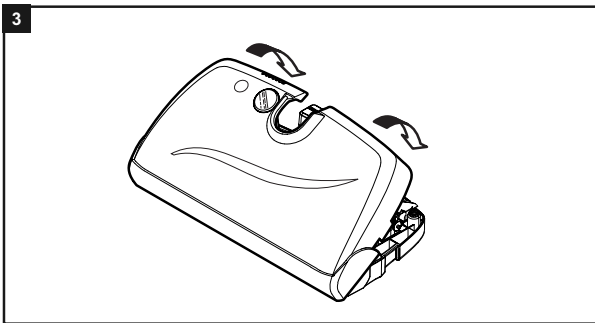

Rest cover on front edge of base as shown.

Rotate cover back. Press cover firmly until side latches snap into place.

Make sure there is no gap between the cover and base and that the rear latches are snapped in place.

Turn nozzle upside down and replace four (4) cover screws.

NOTE: The screws closest to the agitator are longer than the rear screws.

L) TROUBLESHOOTING

Before contacting your Panasonic service centre, check the following points:

NOTE: Failure to correctly maintain your product, for example regular cleaning and unblocking, may result in a charge if referred to a service agent for attention.



WARNING

Disconnect electrical supply before performing maintenance to the vacuum cleaner. Failure to do so could result in electrical shock or personal injury.












PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Vacuum cleaner won't run.	<ol style="list-style-type: none"> 1. Unplugged at mains socket. 2. Tripped circuit breaker replace at household service panel. 3. Thermal protector tripped. 4. Defective mains socket. 	<ol style="list-style-type: none"> 1. Plug in firmly, select the desired setting on the touch control. 2. Reset circuit breaker or fuse. 3. Allow vacuum cleaner to cool 40-50 minutes. (page 6) 4. Check with a good appliance or lamp. Have socket properly serviced.
Poor job of dirt pick-up.	<ol style="list-style-type: none"> 1. Full or clogged dust bag. 2. Wrong pile height setting. 3. Worn agitator. 4. Clogged nozzle or bag holder. 5. Motor protection system activated. 6. Dirty secondary filter and/or exhaust filter. 	<ol style="list-style-type: none"> 1. Change bag. (page 13) 2. Adjust setting. (page 8) 3. Replace agitator. (page 17) 4. See CLOG REMOVAL. (page 15) 5. Check for clogs. (page 15) 6. Clean or change filters. (page 14)
Vacuum cleaner picks up moveable rugs or pushes too hard.	<ol style="list-style-type: none"> 1. Wrong pile height setting. 	<ol style="list-style-type: none"> 1. Adjust setting. (page 8)
Agitator does not turn.	<ol style="list-style-type: none"> 1. Handle in full upright position. 2. Belt protector tripped. 	<ol style="list-style-type: none"> 1. Move handle from upright position. 2. Reset belt protector. (page 6)
Sound changes.	<ol style="list-style-type: none"> 1. New carpet fuzz clogged air path. 	<ol style="list-style-type: none"> 1. See BYPASS VALVE (page 6). 2. See CLOG REMOVAL (page 15).

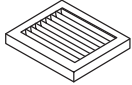 SPECIFICATIONS

MODEL NO.	MC-UG614
POWER SOURCE	230-240V / 50Hz
MAX. INPUT POWER	1000w
MOTOR PROTECTION	YES
HOSE	YES
TURBINE UNIT	YES
DUSTING BRUSH	YES
CREVICE TOOL	YES
EXHAUST FILTER	HEPA Material
DIMENSIONS (W x L x H)	311x422x930 mm
NET WEIGHT	6.0 kg

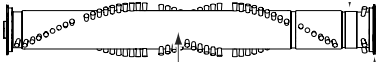Vacuum Cleaner Consumables / Accessories

For customers within the UK and the Republic of Ireland:

DESCRIPTION		MC-UG614
Exhaust filter HEPA		Part number AC38KBRMZ000
Secondary filter		Part number AC37KDKTZ000
Crevice tool		Part number AC60RZFFZVU6
Dusting brush		Part number AC63RCXWZV06
Belt		Part number AC28SCRE1000
Turbine unit		Part number AC80SCXZZV07
Agitator unit		Part number AC84RDRRZ000
Hose assembly		Part number AC94PDRRZV07
Stabilizer		Part number AC70QDRRZU03
Tool bag kit		Part number AC75RDRRZUE0
Dust Bag Kit		Part number AMC-D1EP TYPE U-13

Note: Specifications are subject to change without notice.

Sales and support information


Customer Communications Centre

- For customers within the U.K.: 0844 844 3899
- For customers within Ireland: 01289 8333
- For further support on your product, please visit our website: www.panasonic.co.uk

Direct Sales at Panasonic U.K.

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday - Thursday 9:00am - 5:30pm, Friday 9:30am - 5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.pas-europe.com
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic U.K.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)

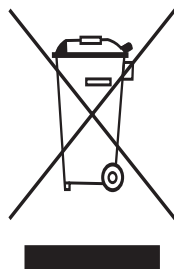

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product. Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

REMINDER FOR CUSTOMER

The model and serial number of the product may be found on the nameplate located at the back of your vacuum cleaner. You should note the model and serial number in the spaces provided and retain this book for future reference.

Model Number:
Serial Number:.....
Date Purchased:
Where Purchased:.....

Pursuant to the directive 2004/108/EC, article 9 (2)
Panasonic Testing Centre
Panasonic Service Europe, a division of
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, F.R. Germany

Panasonic Corporation

<http://www.panasonic.net/>

© Panasonic Corporation 2011

CØ1ZDRR3ØEØØ
ACØ1ZDRRZØEØ
Printed in Mexico