Panasonic

Air conditioner Installation Instruction

CS-XE18, XE24WKUA Series.

Required tool	s for	Installation	Works

ı		riequii	tools for installation works			NO		
ı	1	Philips screw driver	7	Reamer	13	Multimeter		47.9 lbf•ft (65 N•m (6.6 kgf•m))
ı	2	Level gauge	8	Knife	14	Torque wrench		73.8 lbf•ft (100 N•m (10.2 kgf•m))
ı	3	Electric drill, hole core drill (ø2 3/4" (ø70 mm))	9	Gas leak detector		13.3 lbf•ft (18 N•m (1.8 kgf•m))	15	Vacuum pump
ı	4	Hexagonal wrench (5/32" (4 mm))	10	Measuring tape		31.0 lbf•ft (42 N•m (4.3 kgf•m))	16	Digital Micron Gauge
ı	5	Spanner	11	Thermometer		40.6 lbf•ft (55 N•m (5.6 kgf•m))		
۱	6	Pino cuttor	12	Mogamotor				

SAFETY PRECAUTIONS

The items to be followed are classified by the symbols:

• Read the following "SAFETY PRECAUTIONS" carefully before installation.
• Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
• The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below.
• Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications. WARNING This indication shows the possibility of causing death or serious injury.

CAUTION This indication shows the possibility of causing injury or damage to properties only.

Symbol with white background denotes item that is PROHIBITED Symbol with dark background denotes item that must be carried out.

Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

⚠ WARNING

Do not install outdoor unit near handrail of veranda. When installing air-conditi over the handrail causing an accident. oner unit on veranda of a high rise building, child may climb up to outdoor unit and cros Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances Poor contact, poor insulation or over current will cause electrical shock or fire.

Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happe Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.

Do not sit or step on the unit, you may fall down accidentally.

Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing. When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc. Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

For R32/R410A model, use piping, flare nut and tools which is specified for R32/R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.
 For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.
 Since the working pressure for R32/R410A is higher than that of refrigerant R22 model, replacing conventional piping and flare nuts on the outdoor unit side are recommended.

recommended.
If reuse piping is unavoidable, refer to instruction "IN CASE OF REUSING EXISTING REFRIGERANT PIPING"
Thickness of copper pipes used with R32/R410A must be more than 1/32" (0.8 mm). Never use copper pipes thinner than 1/32" (0.8 mm).
It is desirable that the amount of residual oil is less than 0.00004 oz/ft (40 mg/10 m).

Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.

Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire. Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock

istall at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop ar or installation work, follow all electrical, building, plumbing, local codes, regulations and these installation instructions. If electrical circuit capacity is not enough or a fect is found in electrical work, it will cause electrical shock or fire.

Do not use spliced wires for indoor / outdoor connection cable. Use the specified indoor / outdoor connection cable, refer to instruction (§) INDOOR/OUTDOOR UNIT ELECTRICAL WIRING and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection of fixing is not perfect, it will cause heat-up or fire at the connection.

ire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock is equipment must installed with an Earth Leakage Circuit Breaker (ELCB) or Ground Fault Current Interrupter (GFCI) or Appliance Leakage Current Interrupte LCI) that has been certified by an NRTL Certified Testing Agency and that is suitable for the voltages and amperages involved. Otherwise, if may cause electricated and fire in case of equipment breakdown.

uring installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves pened condition will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc. During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerangas leakage.

After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant comes into contact with fire.

Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant comes into contact with fire

This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown. Î∖ CAUTION

Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire. Do not release refrigerant during piping work for installation, re-installation and during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause

Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.

Do not touch the sharp aluminium fin, sharp parts may cause injury.

Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.

Select an installation location which is easy for maintenance.

Power supply connection to the room air conditioner.

Power supply cord shall be UL listed or CSA approved 3 conductor with minimum AWG12 wires.

Power supply point should be in an easily accessible place for power disconnection in case of emergency.

In some countries, permanent connection of this air conditioner to the power supply is prohibited.

Fix power supply connection to a circuit breaker for permanent connection.

Use NRTL approved fuse or circuit breaker (rating refers to name plate) for permanent connection.

IMPORTANT
 This product has h

IMPORTANT
This product has been designed and manufactured to meet ENERGY STAR* criteria for energy efficiency when matched with appropriate coil components. However, proper refrigerant charge and proper air flow are critical to achieve rated capacity and efficiency, installation of this product should follow the manufacturer's refrigerant charging and air flow instructions. Failure to confirm proper charge and airflow may reduce energy efficiency and shorten equipment life. (Only for XE18***)
This model is equipped with Room Freeze Protection (RFP) feature. Room Freeze Protection for proper and proper and paper and proper are protecting any equipment or appliances which may be destroyed as a result of freezing temperature. When the RFP is selected, the unit will operate the fan at high speed for proper room temperature monitoring. When the sensor detects that the room temperature has dropped below 46°F (8°C), the compressor/heat pump operation begins. When the room temperature reaches 50°F (10°C), the unit shuts off, then will repeat continuously if the temperature drops below 46°F (8°C), again.
The Room Freeze Protection function (RFP) cannot be used unless the unit is energized and set into RFP mode, In the advent of a power failure this mode will not function. During the RFP mode, POWERFUL OPERATION, QUIET OPERATION AND FAN SPEED selection are all disabled. Please consult with your HVAC installer or professional for more details.

Accessories part Qty No. Accessories part Qty No. Accessories part Qty

 \mathbb{Q}

rain elbow 💞 Rubber cap (Front side)

(4.8°)

(Left and right are identical

Insulation of piping connections

Attaching the remote control holder to the wall

Remote control 3

This illustration is for explanation purposes only.
 The indoor unit will actually face a different way.

Carry out insulation after

secure with vinyl tape.

checking for gas leaks and

Installation parts

__ Bushing-Sleeve (X

closely on the wa as possible, but be careful that it

Vinyl tape (wide) (

• Apply after carrying out a drainage test.

• To carry out the drainage test, remove the air filters and pour water into the he exchanger.

Saddle (X)

cord (%)

able (%)

Additional drain

- Sleeve (%)

Putty (%)

you should

1	Installation plate		1	4	Battery	2	7	
2	Installation plate fixin screw	g	5	5	Remote	1	8	
3	3 Remote Control		1	6	Remote fixing so	2	9	
A P 11 1 . 1 . 1 . 1 . 1		Piping size]
A	Applicable piping kit			Gas		Liquid		
CZ-3F5, 7BP			3/8" (9.52 mm)			1/4" (6.35 mm)]
	CZ-4F5, 7, 10BP			12.7 r	mm)	1/4" (6.35 mm)]
	CZ-52F5, 7, 10BP			15.88	mm)	1/4" (6.35 mm)		1

SELECT THE BEST LOCATION

INDOOR UNIT □ Do not install the unit in excessive oil tume area such as kitche workshop and etc.
□ There should not be any heat source or steam near the unit.
□ There should not be any obstacles blocking the air circulation.
□ A place where air circulation in the room is good.
□ A place where drainage can be easily done.
□ A place where noise prevention is taken into consideration.
□ Do not install the unit near the door way.
□ Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.

ience or other obstacles. Indoor unit of this air conditioner shall be installed in a height of at least 1.8 m. OUTDOOR UNIT If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.

There should not be any animal or plant which could be affected by hot air discharged.

Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.


Do not place any obstacles which may cause a short circuit of the discharged air.

If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the table.

 Recommended installation height for outdoor unit should be above the concerned spew

 Heconfine instantation in each to outdoor unit should be above the seasonal snow level.
 Be careful not to locate outdoor unit directly under a roof line where falling snow or ice can cause damage or dripping water can increase ice accumulation and defrost cycles. | Model | Capacity | Piping size | Std. | Liquid | Length | Elevation | Length | Len

Example: For XE18****
If the unit is installed at 41 ft (12.5 m) distance, the quantity of additional refrigera should be 1.64 oz (50 g) (41 - 32.8) ft x 0.2 oz/ft = 1.64 oz. ((12.5 - 10) m x 20 g/m = 50 g).

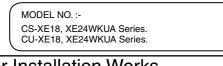

SELECT THE BEST LOCATION

HOW TO FIX INSTALLATION PLATE

The mounting wall shall be strong and solid enough to prevent it from the vibration More than 2 2 screw → 🕏 10 ⁵/₆₄" (256 mm)

Model 0 0 0 0 0 21 21/32" | 10 5/8" (550 mm) | (270 mm) XE18****, XE24**** The center of installation plate should be at more than ① at right and left of the wall

The distance from installation plate edge to ceiling should more than From installation plate center to unit's left side is 3.

From installation plate center to unit's right is 4. : For left side piping, piping connection for liquid should be about ⑤ from this line. : For left side piping, piping connection for gas should be about 6 from this line. Mount the installation plate on the wall with 5 screws or more (at least 5 screws).

(If mounting the unit on the concrete wall, consider using anchor bolts.) Always mount the installation plate horizontally by aligning the marking-off line with the thread and using a level gauge.

 Drill the piping plate hole with Ø2 3/4" (Ø70 mm) hole-core drill. Line according to the left and right side of the installation plate. The meeting point of the extended line is
the center of the hole. Another method is by putting measuring tape at position as shown in the diagram
above. The hole center is obtained by measuring the distance namely 5 1/1e" (128 mm) for left and right

Drill the piping hole at either the right or the left and the hole should be slightly slanting to the outdoor side.


TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

Cut the sleeve until it extrudes about 19/32" (15 mm) from the wall. ⚠ CAUTION

Insert the piping sleeve to the hole.

2. Fix the bushing to the sleeve.

When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable. 4. Finish by sealing the sleeve with putty or caulking compound at the final stage

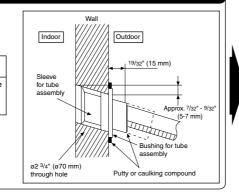


CONNECT THE CABLE TO THE INDOOR


. The inside and outside connection cable can be connected without removing the front grille. 2. Unscrew the conduit cover and fix the conduit connector to conduit cover with lock nut, then secure it

Connection cable between indoor unit and outdoor unit should be UL listed or CSA approved 4 conductor wires minimum AWG16 in accordance with local electric codes.

• Ensure the colour of wires of outdoor unit and terminal number are the same as the indoor's repectivel Terminals on the indoor unit 1 2 3 1 Colour of wires (connection cable)

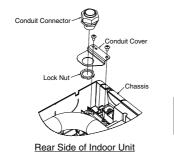

Terminals on the outdoor unit 1 2 3

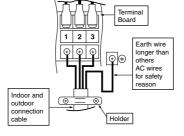

⚠ WARNING This equipment must be properly earther

 Earth lead wire shall be Yellow/Green (Y/G) in colour and shall be longer than other lead wires as showr in the figure for electrical safety in case of slipping.

WIRE STRIPPING AND CONNECTING REQUIREMENT Wire strippir connecting terminal board 7/32" (5 mm) or more

ACCEPT

CUTTING AND FLARING THE PIPING

Please cut using pipe cutter and then remove the burrs Remove the burrs by using reamer. If burrs are not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.

Please make flare after inserting the flare nut onto the copper pipes. Bar Yoke Core 过 To flare 1. To cut


0 – 1/32* (0-0.5 mm) Inclined Surface Cracked Uneven damaged thickness


PROHIBITED

PROHIBITED

INDOOR UNIT INSTALLATION

INDOOR UNIT

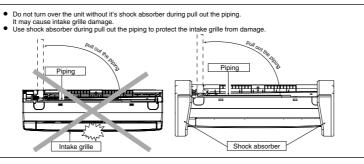

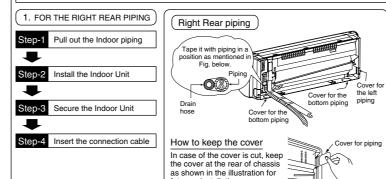

(Left and 2 bottom covers for 2. FOR THE RIGHT BOTTOM Right Bottom piping Step-1 Pull out the Indoor piping Tape it with piping in

Fig. below Step-2 Install the Indoor Unit Insert the connection cable Step-4 Secure the Indoor Unit

3. FOR THE EMBEDDED PIPING

Replace the drain hose

Use a spring bender or

Cut and flare the

Step-5 Install the Indoor Unit

Step-6 Connect the piping

mbedded piping · When determining the

sions of the piping, slide the unit all the way to the left on the installation plate.

Refer to the section "Cutting and

· Please refer to "Connecting the piping" column in outdoor unit section. (Below steps are done after connecting the

Insulate and finish the

Please refer to "Insulation

Step-8 Secure the Indoor Unit


outdoor piping and gas-leakage confirmation.)

Pull the connection cable

Install the indoor unit look the indoor unit to the upper portion of installation plate. (Engage the indoor unit with the upper edge of the Bend the embedded piping seated on the installation plate by moving it in left equivalent to bend the piping so that the piping is not crushed. and right.


Secure the Indoor Unit Press the lower left and right side of the unit against the installatio plate until hooks engages with their slot (sound click). Unit's hook Installati

Insert the connection cable

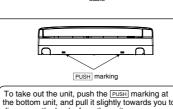

the bottom unit, and pull it slightly towards you to disengage the hooks from the unit.

(This can be used for left rear piping and bottom piping also.)

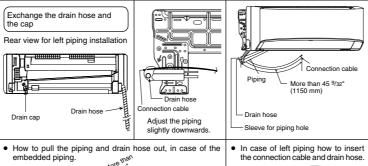

Piping

Priping

Priping

Priping

Drain hose from main unit

PVC tube (VP-65) for piping and connection cable

PVC tube for drain hose (VP-30) PVC tube for Drain hose **66** Piping Indoor unit (For the right piping, follow the same 3 7/32" (82 mm)

Drain hose adapter 🛮 usage Join indoor drain hose to 3/4" (20 mm) nominal PVC pipe size by using drain hose adapter 7 when necessary. Close join by Vinyl Tape (> Remarks: Make sure indoor unit drain hose & 3/4* (20 mm) nominal PVC pipe are fully inserted to drain hose adapter [7]. Install incline downward more than 1
 Apply PVC glue at the join.

OUTDOOR UNIT

SELECT THE BEST LOCATION

INSTALL THE OUTDOOR UNIT

After selecting the best location, start installation to Indoor/Outdoor Unit Installation Diagram.

1. Fix the unit on concrete or rigid frame firmly and horizontally with a bolt nut ø13/32" (ø10 mm).

2. When installing at roof, please consider strong wind and earthquake.

Please fasten the installation stand firmly with bolt or nails. Please lasto.


A B C D 24 ¹/₈" 5 ⁵/₃₂" 15/16" 14 ³/₁₆" (613 mm) (131 mm) (24 mm) (360.5 mm) XE18***, XE24***

CONNECT THE CABLE TO THE OUTDOOR

Remove control board cover (Resin and Metal). Remove particular plate

Remove plugs. Fix the conduit connectors to the knockout holes with lock-nuts, then secure them against the side panel All wires pass through conduits & particular plate's opening hole.
 Connecting wire between indoor unit and outdoor unit should be UL listed or CSA approved 4 conductor wires minimum AWG16 in accordance with local electric codes.
 Wire connection to the power supply (208/230V 60Hz) through circuit breaker.
 Connect the UL listed or CSA approved wires minimum AWG12 to the terminal board, and connect the other end of the wires to ELCB/GFCI.

Connect the power supply cord and connecting wire between indoor unit and outdoor unit according to the diagram below. 208/230V min AWG16

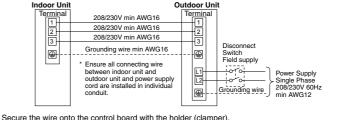

O.After completing wiring connections, reattach the particular plate and control board cover (metal and resin) to the original position with the screws.
I.For wire stripping and connection requirement, refer to instruction (s) of indoor unit.

⚠ WARNING This equipment must be properly earthed.

HOW TO TAKE OUT FRONT GRILLE

Remove the 3 caps on the front grille as Move

shown in the illustration at right, and then the vane

When reinstalling the front grille, first set the vertical airflow direction louver to the horizontal position and then carry out above steps 2 - 3 in the reverse order.

The below operations will be performed by pressing the "AUTO" switch.

1. AUTO OPERATION MODE

AUTO OPERATION MODE
The Auto operation will be activated immediately once the Auto Switch is pressed and released before 5 sec..
TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)
The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec..

A "pep" sound will occur at the fifth sec.. in order to identify the starting of

Press the "AUTO" switch continuously for more than 8 sec. to below 11 sec. and release when a "pep pep" sound is occured at eight sec. (However, a "pep" sound is heard at fifth sec..) then press Remote controller "A/C Reset" button once. Remote controller signal will activate operation force heating mode. REMOTE CONTROLLER RECEIVING SOUND ON/OFF

The ON/OFF of Remote controller receiving sound can be change over by the following steps:
a) Press "AUTO" switch continuously for more than 16 sec. to below 21 sec..
A "pep", "pep" sound will occur at the sixteenth sec.

If the unit is used in an area where temperature falls below 32°F (0°C) for 2 or 3 consecutive days, it is

ecommended not to use the Drain elbow 8 and Rubber caps 9, water from defrost process will trap,

freeze up and obstruct fan rotation. Water may drip from the basepan hole area during defrost function

iving sound status will be reversed between ON and OFF

sound setting mode is activated.
c) Press "AUTO" switch again. Everytime "AUTO" switch is pressed (within 60 sec. interval),

Short "pep" sound indicates that Remote controller receiving sound is OFF

DISPOSAL OF OUTDOOR UNIT DRAIN WATER

Use a rigid or flexible PVC pipe (local supply) to dispose drained water from the elbow or use a stainless steel tray (local supplied) to collect and dispose water

The unit should be mounted on a stand that suits to a local

Seal the four 25/32" (20mm) diameter holes with Rubber caps 9 (refer to illustration at right).

do not stand or place objects underneath.

CHECK THE DRAINAGE

Open front panel and remove air filters.

Provide a minimum clearance of 2" (50mm) to access

(Drainage checking can be carried out without removing the

. Ensure that water flows out from drain hose of the indoor unit.

Operate the unit at cooling/heating operation mode for fifteen

Ensure the difference between the intake temperature and the discharge is more than 46.4°F (8°C) during Cooling operation or

EVALUATION OF THE PERFORMANCE

Measure the temperature of the intake and discharge air.

more than 57.2°F (14°C) during Heating operation.

Pour a glass of water into the drain tray-styrofoam

Please follow the steps below to take out front

grille if necessary such as when servicing.

1. Set the vertical airflow direction louvers to

remove the 4 mounting screws.

Pull the lower section of the front grille towards you to remove the front grille.


AUTO SWITCH OPERATION

Test Run operation.
HEATING TRIAL OPERATION

the bottom of base pan.

the horizontal position.

• Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical

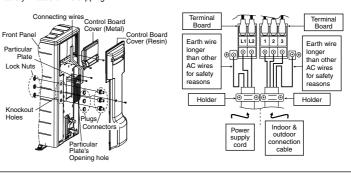

Use Test pen to remove Cap

CONNECT THE PIPING

(Connecting The Piping to Indoor Please make flare after inserting flare nut (locate at joint Do not over tighten, overtightening may cause gas leakage portion of tube assembly) onto the copper pipe. (In case Piping size 1/4" (6.35 mm) of using long piping)

Connect the piping 3/8" (9.52 mm) 31.0 lbf•ft [42 N•m (4.3 kgf•m)] Align the center of piping and sufficiently tighten the 1/2" (12.7 mm) 40.6 lbf•ft [55 N•m (5.6 kgf•m)] flare nut with fingers. Further tighten the flare nut with torque wrench in 5/8" (15.88 mm) 47.9 lbf•ft [65 N•m (6.6 kgf•m)]

Connecting The Piping to Outdoor

specified torque as stated in the table

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge. Make flare after inserting the flare nut (locate at valve) onto the copper pipe. Align center of piping to valve and then tighten with torque


wrench to the specified torque as stated in the table.

Gas Leak Checking)

Pressure test to system to 400 PSIG with dry nitrogen, in stages. Thoroughly leak check the system.



WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOF UNIT AND PIPES in the following procedure.

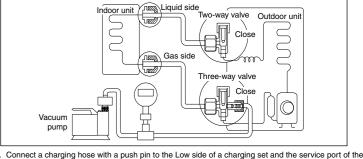

S-way valve.

Connect the micron gauge between vacuum pump and service port of utdoor units.

Turn on the power switch of the vacuum pump and make sure that connect digital micron gauge and to pull down to a value of 500 microns.

To make sure micron gauge a value 500 microns and close the low side valve of the charging set and turn off the vacuum pump.

turn off the vacuum pump. Disconnect the vacuum pump house from the service port of the 3-way valve. Disconnect the vacuum pump house from the service port caps of the 3-way valve at a torque of 13.3 lbfeft (18 N·m) with a torque wrench. Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves to "Open" using a hexagonal wrench (5/32" (4 mm)). Mount valve caps onto the 2-way valve and the 3-way valve.

• De sure to check for gas leakage.

If micron gauge value does not descend 500 microns, take the following measures:
 If the leak stops when the piping connections are tightened further, continue working from step ③.
 If the leak does not stop when the connections are retightened, repair location of leak.
 Do not release refrigerant during piping work for installation and reinstallation.
 Be careful with the liquid refrigerant, it may cause frostbite.


Ð١ PIPING INSULATION

lease carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installati Diagram. Please wrap the insulated piping end to prevent water from going inside the piping. If drain hose or connecting piping is in the room (where dew may form), please increase the insula by using POLY-E FOAM with thickness 1/4" (6 mm) or above.

HOW TO REPLACE NETWORK ADAPTER

Remove the front grille (refer how to take out front grille) from the unit.

Remove the network adapter box by releasing the hook (Figure 1.0).
Remove the cover by unclipping it and pulling it out (Figure 1.1) Remove the top casing by pressing the side of the network adapter box. (Figure 1.2)

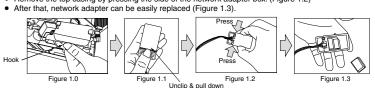

IN CASE OF REUSING EXISTING REFRIGERANT PIPING

☐ Observe the followings to decide reusing the existing refrigerant piping.

Poor refrigerant piping could result in product failure.

In the circumstances listed below, do not reuse any refrigerant piping. Instead, make sure to install a power piping.

iew piping.

Heat insulation is not provided for either liquid-side or gas-side piping or both.

Heat insulation is not provided for either liquid-side or gas-side piping or both.

The existing refrigerant pipe has been left in an open condition.

The diameter and thickness of the existing refrigerant piping does not meet the requirement.

The piping length and elevation does not meet the requirement.

Perform proper pump down before reuse piping.

In the circumstances listed below, clean it thoroughly before reuse.

Pump down operation cannot be performed for the existing air-conditioner.

The compressor has a failure history.

Oil color is darken. (ASTM 4.0 and above).

The existing air-conditioner is gas/oil heat pump type.

Do not reuse the flare to prevent gas leak. Make sure to install a new flare.

If there is a welded part on the existing refrigerant piping, conduct a gas leak check on the welded part.

Replace deteriorated heat insulating material with a new one.

Heat insulating material is required for both liquid-side and gas-side piping.

Proper Pump Down Method ① Operate air conditioner ② After 10 ~ 15 minutes of pre

operation, close 2 way valve. After 3 minutes, close 3 way 10 ~ 15 minutes.

CHECK ITEMS Is there any gas leakage at flare nut

Has the heat insulation been carried out at flare nut connection? Is the connection cable being fixed to terminal board firmly? Is the connection cable being clamped

Is the drainage ok?

ENGLISH

Refrigerant ai

Is the indoor unit properly hooked to the nstallation plate? Is the power supply voltage complied with Is there any abnormal sound?

Is the cooling/heating operation normal? Is the thermostat operation normal?

(Refer to "Check the drainage" section)

Is the remote control's LCD operation normal?

Is the earth wire connection properly done?

ACXF60-39140-AA PRINTED IN MALAYSIA